

BERG HORTIMOTIVE
Burg. Crezeelaan 42a
2678 KZ De Lier - Holland
E-mail: service@berghortimotive.nl
Internet: www.berghortimotive.com
Tel. (+31) (0)174-517700

(+31) (0)174-613293 (service)

REPLACE A BR08 BOARD FOR A BR08I BOARD

Replace a BR08 board for a BR08I board.

The boards are fully interchangeable but there are some small differences
The Battery(accu) and Motor(M) connections are marked, and at the same place. Only at the new
BR08I board they are bigger so install new eye connectors with diameter M6.






Old BR08 Board

New BR08I Board

The connections from the outputs and inputs are marked with numbers.

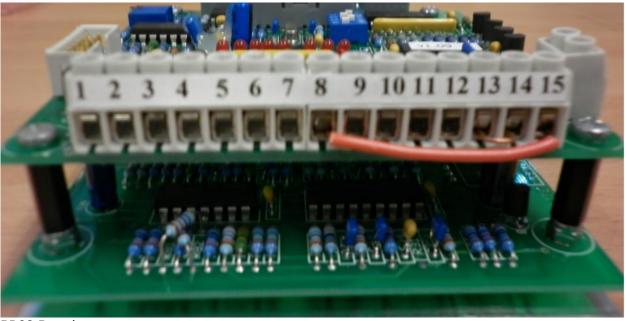

BR08 Board

On the BR08I Board the connections has the same numbers.



BR08I Board.

Connect all the wires at the same connector number.


Note! The wire between 8 and 15 is not needed anymore.

The wire between 13 and 14 is needed when the machine has no hydraulic lifting wheels. If there are hydraulic lifting wheels connect the wires from the limit switch on 13 and 14!

Special note for Meto Spray trolley.

The (blue) wire at connection nr.2 at the old BR08 Board, must be installed on connection nr.3 on the new BR08I Board.

Product info BR08I circuit board

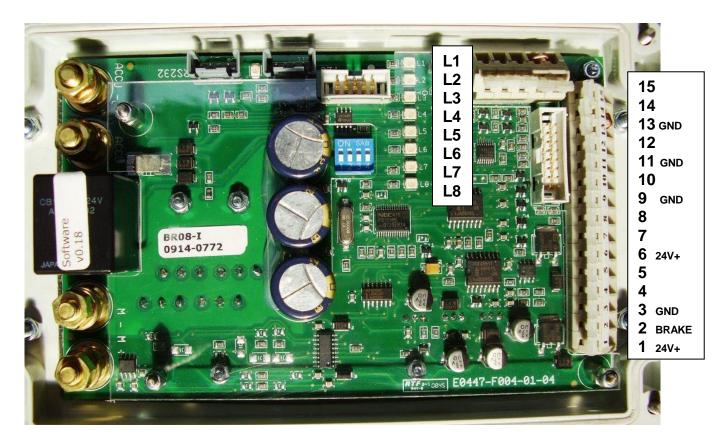



Dip switch adjustment:

Dip switch dajuscinche								
Dipswitch: 1234		Function (default setting #)		Characteristic/Function				
ON/OFF	0000	Pipe rail trolley (BRW SP25)	#	Tumbler switch * (direction push				
				button)				
ON/OFF	0001	Pipe rail trolley (BRW SP25)		Tumbler switch * (direction turn				
				switch)				
ON/OFF	0010	Pipe rail trolley (BRW SP15)	#	Gas/brake button on console				
ON/OFF	0011	Pipe rail trolley (BRW SP15)		Gas/brake button (Deceleration sort)				
ON/OFF	0100	Roses trolley 1						
ON/OFF	0101	Roses trolley 2		Photocell active depends of direction				
ON/OFF	0110							
ON/OFF	0111							
ON/OFF	1000							
ON/OFF	1001							
ON/OFF	1010	Hose reel circuit board	#	Meto from s/n 431 2007				
ON/OFF	1011							
ON/OFF	1100							
ON/OFF	1101	Meto Trans	#	Deceleration sort				
ON/OFF	1110							
ON/OFF	1111	Meto spray trolley <2007	#	To s/n 430 (Deceleration sort)				

^{*} Tumbler switch for pedal function is located in box near key switch.

Indicate LED overview:

Dip switch (termi.)	0010 / 0011	0000 / 0001	1110 / 1111	1100 / 1101
Functie	Pipe rail trolley B9- SP15	Pipe rail trolley SP25	Meto spray trolley	Meto Trans
LED 1 (14)	Limit lifting wheels	Limit lifting wheels	Blockade (13-14 NC)	Blockade (13-14 NC)
LED 2 (10)	Pedal 2	Pedal 2	Bumper rear	Hose reel
LED 3 (2)	Parking brake output	Parking brake output	Extra output (R1)	Extra output (R1)
LED 4 (12)	Pedal 1	Pedal 1	Drive	Drive
LED 5 (7)	Input backwards	Switch pedal function	Bumper front	N.C.
LED 6	Buzzer output	Buzzer output	Backwards	Backwards
LED 7	Button pedal function	Button pause	N.C.	N.C.
LED 8	Button direction	Button direction	N.C.	N.C.

